



SIZING THE BLOWER: REMOVING THE HANDLE

In order to adjust the blower to fit properly into the Dome Heater housing, the handle may need to be removed.

Tools you will need: Hacksaw. Phillips screw driver. A helper.



1. Use a hacksaw to completely remove the handle of the blower. Cut it off flush with the body of the blower (this will not affect the blower performance or its longevity).



2. Turning the blower on its side will make it more stable while cutting.



3. Completely remove the handle.



4. There is no need to cover or plug the holes.



5. Remove the white vinyl boot from the heater housing by removing the attachment screws.



6. Slide the white boot over the snorkel tube and the snout of the blower so that it rests firmly up against the blower housing. You may have to tug on it a bit to get it into place.



7. This is what it will look like from the underside of the blower.



8. Use the black strap and buckle provided to fully wrap around the boot/snorkel tube/ and snout. The buckle on the strap can be a bit tricky (see #9).



9. Snap the buckle and pull the black strap tightly. (If you are not able to tension the strap, it is looped incorrectly through the buckle. Try again!) Turn the blower power switch to the "ON" position and set the speed to the "High" setting (if you have a residential dome, the pressure switch will automatically turn the blower on and off as needed).





10. Slide the end of the snorkel tube down through the discharge port of the Dome Heater housing and lower the blower into the hole.



11. Pull the white boot flange completely through the opening and reattach it to the Dome heater using the same screw holes that originally were removed.



12. This picture shows how the power cord should be routed through the boot (there will also be a clear pressure sensor tube on residential domes).

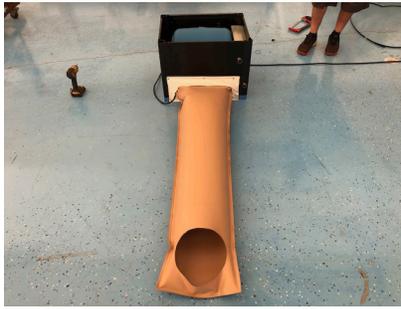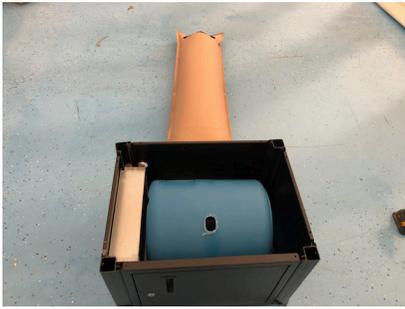

13. Here are a few views of a properly installed blower boot and snorkel tube.



14. WATCH YOUR FINGERS ON THIS STEP: Carefully and evenly place the blue lid back on top of the Dome Heater housing. Press into place and secure with the four screws provided.

15. To turn the blower on or off, you can simply unplug it. To turn the unit off with the blower mounted switch or adjust the speed, use the key provided to unlock the rear door on the housing. The switches are located on the right side of the opening.



16. More product information about the Dome heaters and your Dome can be located at the library. The library is located as shown on the metal plate displayed in this picture. The location is at: go-ab.com (look for the "Library").

Ameri-Brand Products Inc

4619 Olive Hwy.
Oroville, CA. 95966

800-982-6966

www.ameri-brand.com • info@go-ab.com

Spec-AD-088.pdf-11-30-21